

# Check valve Spring loaded check

 $Q_{max}$  = 60 l/min,  $p_{max}$  = 350 bar

ball type

Type series: RVVE-G-10-...



- Screw-in cartridge valve
- Compact construction
- High pressure rating
- Very small pressure rise
- High opening pressures
- Usable as preload valve

## Description

The RVVE series check valve is characterized by very high opening pressures and very small pressure rise. This is reflected in the flat performance graph. The valve can be used as a preload valve. The spring-loaded spherical poppet-type check valve is very robust, extremely leak-proof and insensitive to contamination.

Valve seat, poppet and body are hardened. The properties of the sealing faces have been enhanced by precision mechanical processing. The valves prevent flow in the screw-in direction (B to A) and open in the opposite direction. The valve is available in nominal sizes 04, 06, 08, 10, 16, 25, 32 and 40.

## Symbol





### **Technical Data**

General Characteristics	Description, value, unit
Function group	Check valve
Function	Spring loaded check
Design	Screw-in cartridge valve
Characteristic	ball type
Construction size	nominal size 10
Thread size	G 1/2"
Mounting attitude	unrestricted
Weight	0.006 kg
Tightening torque steel	30 Nm

Hydraulic Characteristics	Description, value, unit
Maximum operating pressure	350 bar
Maximum flow rate	60 l/min
Nominal flow rate	50 l/min
Flow direction	see symbol
Hydraulic fluid	HL and HLP mineral oil according to DIN 51 524; other fluids on request!
Minimum fluid temperature	- 30 °C
Maximum fluid temperature	+ 80 °C
Viscosity range	10 500 mm <sup>2</sup> /s (cSt)
Minimum fluid cleanliness (cleanlineless class according to ISO 4406:1999)	class 20/18/15
Opening pressure	4/6/8/10/12 bar




#### NOTE!

For other values please contact Bucher Hydraulics.

# Performance graphs


measured with oil viscosity 33.0 mm<sup>2</sup>/s (cSt)

 $\Delta p$  = f (Q) Pressure drop-flow rate characteristic

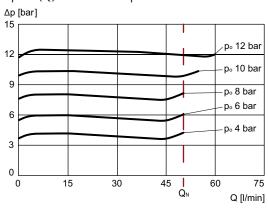



#### Dimensions and sectional view

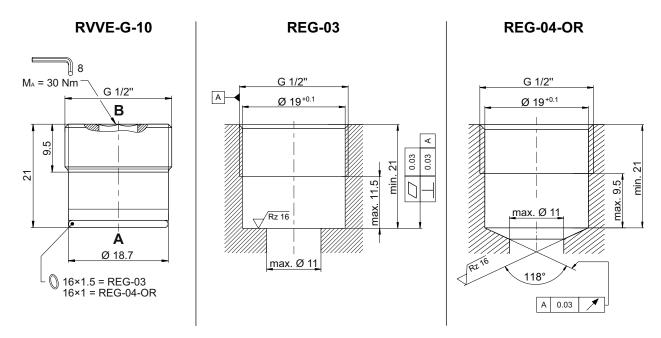

RVVE-G-10 = check valve / screw-in cartridge valve
REG-03 / REG-04 = dimension of the cavity for screw-in cartridge RVVE-G-10

#### Installation information



#### NOTE!

When fitting the screw-in cartridge valve, use the specified tightening torque. The value can be found in the chapter technical data. Orifices or nozzles are to be placed after the check valve. If this is not possible, a right-angled bore must be designated between the check valve and the nozzle. (see data sheet 170-P-059000). Recommendation: before installing the valve, fit the O-ring in the cavity.



## **ATTENTION!**

When fitting the valve, make sure that it is firmly seated on the sealing surface and that it is not deformed by the use of excessive force.

# **Application Notes**



#### NOTE!

The maximum operating pressure must not be exceeded even when pressure peaks occur. In applications such as accumulator circuits, where sudden pressure can be applied to the valve in the free-flow direction, ensure that the specified flow ratings are not exceeded. Buyers bear the sole responsibility for ensuring that the valve is suitable for their applications and must be substantiated by trials or testing, if necessary.




#### ATTENTION!

The valves are only suitable for pressure relief in the opening direction to a limited extent. (if necessary, please consult Bucher Hydraulics).



## Ordering code

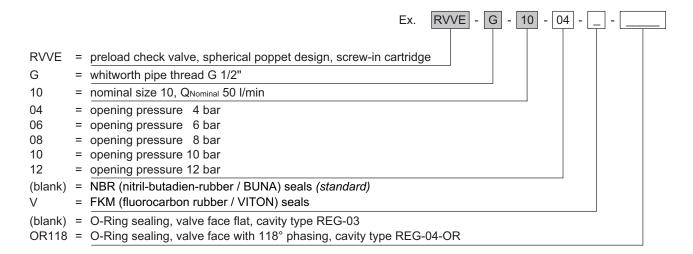

#### Related data sheets

Reference	Description
170-P-059000	Using nozzles or orifices before a Check Valve

#### info.de@bucherhydraulics.com

www.bucherhydraulics.com

© 2021 by Bucher Hydraulics Dachau GmbH, 85221 Dachau, Germany

All rights reserved.

Data is provided for the purpose of product description only, and must not be construed as warranted characteristics in the legal sense. The information does not relieve users from the duty of conducting their own evaluations and tests. Because the products are subject to continual improvement, we reserve the right to amend the product specifications contained in this catalogue.